

## WARRANTY

Thank you for purchasing this quality Babylove product from our exclusive range of baby products.

We are confident that you will appreciate its many highlights including durability and reliability.

Your new product has been manufactured to comply with the Australian Standard ASTM F977 and comes with a 12 month warranty.

Please keep this instruction manual for future reference.

Distributed by Nursery Elegance Pty Ltd  
ACN 122 443 387  
Unit 10, 339 Williamstown Road  
Port Melbourne VIC 3207, Australia  
PHONE 1300 131 477

WEB - [www.babylove.com.au](http://www.babylove.com.au)

EMAIL - [info@Babylove.com.au](mailto:info@Babylove.com.au)

• Due to our continuing program of development, we reserves the right to alter the specifications, colour or design without any further notice.

• Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

# JAZZ Baby Walker



## INSTRUCTION MANUAL

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE








## 6. CLOSE/LOWER AND ADJUST WALKER HEIGHT

**NOTE: The child must be removed from the walker before releasing the lock to lower the walker, to avoid injury. Be sure to follow these instructions carefully to avoid the top tray falling down onto your hand.**

- A. Remove the child from the walker.
- B. Locate the safety lock button underneath the tray.
- C. Place one hand on the base. Turn the safety lock button anti clockwise. Now push up on the front of the button so it rotates upward. Hold the button in this position and lower the seat down.
- D. Before completely lowering down, take care of your hand position and make sure you have enough space.

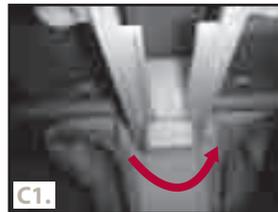

**To adjust the seat height from highest to lowest of three positions :**

- A. Remove the child from the walker.
- B. Position one hand on the safety lock button located underneath and centre of tray and the other hand on either corner of the tray.
- C. Turn the safety lock button anti clockwise and slowly push and hold the button up and the tray will begin to lower. Let go of the lock and allow the tray to lock into a lower position. Press down lightly on the upper tray to confirm it is locked into place.

## 3. SEAT ASSEMBLY



- A. The seat needs to be attached to the seat moulding. There are 3 attachment points at the front and 6 around the top section.
- B. Position the seat into the seat moulding.
- C. Attach the seat to the front section first. Locate the plastic pins into the keyholes and slide down until locked into position. Pull down by the fabric if a little tight to make sure all 3 plastic pins are securely locked.
- D. To attach the top seat section to the seat moulding. Align the square hole in the seat fabric over the square hole in the seat moulding.



Now locate the plastic clip attached to the backrest support and press it through the holes until it locks into the seat moulding.

Now continue to insert the remaining clips into and around the rear of the seat moulding.

Pull up on the fabric seat to make sure all the clips are engaged. If not press them until locked into position.

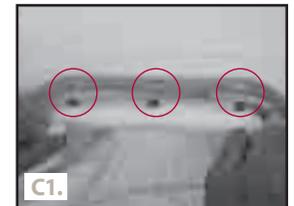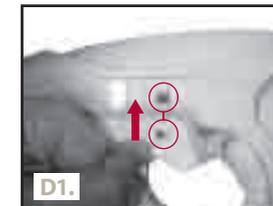

#### 4. ACTIVITY CENTRE TRAY ASSEMBLY

- A.** To attach the activity toys. Align each toy with the holes in tray. Press each plastic base into the hole until it locks into place. Pull up on the toy to make sure they are locked into position.




**NOTE: You will need 2 x AA batteries to operate the CAR lights and music sounds.**

**WARNING: Non-rechargeable batteries are not to be recharged. Adult supervision is required when charging rechargeable batteries. Used and new or different types of batteries should not be mixed. Remove the batteries as soon as they become exhausted. Supply terminals for batteries are not to be short circuited.**



- B.** To fit the batteries, turn the toy car over, undo the battery cover screw and remove the cover. Fit 2 AA batteries in the direction shown. (Check that the batteries are fitted correctly by pushing the coloured button on top of the car. If no music sounds, check battery installation.) Replace the battery cover and secure with the screw.

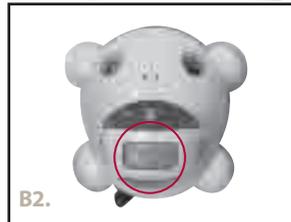

- C.** To attach the CAR to the toy tray. Note the Tray orientation in the image. Make sure the locking arm is on the left. To attach, align the yellow extension at the front of the CAR with the opening in the toy tray. Push the extension into the tray. Push down on the CAR and slide the locking arm to the right. The CAR should now be locked onto the toy tray.



#### 4. ACTIVITY CENTRE TRAY ASSEMBLY...continued

- D.** To remove the CAR from the toy tray, slide the locking arm to the left and remove the CAR. The CAR also comes with an accessory strap. It can be attached to other nursery or furniture items.



#### 5. TO FIT & REMOVE THE TOY TRAY FROM THE SEAT MOULDING

- A.** You will notice two white plastic tabs inserted into the tray moulding. Also two cavities on the underside of the toy tray. These are to lock the toy tray to the main seat moulding.

- B.** Place the assembled toy tray onto the seat moulding so it sits flat on the surface.

- C.** Hold the toy tray down with one hand and with the other hand locate each plastic tab on the underside of the seat moulding. One at a time, push them up and into the toy tray cavity, then rotate the tabs to the right so they lock the toy tray onto the main seat moulding. To remove the toy tray, reverse the procedure.

