

WARRANTY

Thank you for purchasing this quality Babylove product from our exclusive range of baby products.

We are confident that you will appreciate its many highlights including durability and reliability.

Your new product has been manufactured to comply with the Australian Standard AS/NZS 2088 and comes with a 12 month warranty.

Please keep this instruction manual for future reference.

Distributed by Nursery Elegance Pty Ltd
ACN 122 443 387
Unit 10, 339 Williamstown Road
Port Melbourne VIC 3207, Australia
PHONE 1300 131 477

WEB - www.babylove.com.au

EMAIL - info@Babylove.com.au

- Due to our continuing program of development, we reserves the right to alter the specifications, colour or design without any further notice.
- Due to the variations in the style and design of our products the illustrations used in this instruction booklet are generic.

SNAP n GO Travel System



INSTRUCTION MANUAL

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT: RETAIN FOR FUTURE REFERENCE.

READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE.

THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

WARNINGS

- Do not leave children unattended.
- Follow the manufacturer's instructions.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not carry additional children or bags on the stroller.
- Do not allow children to stand on the seat, the stroller may tip over.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 4kg in the basket, or 1kg in the canopy pocket (if supplied).
- The weight of the child using this product should not exceed 17kg.
- Do not use accessories other than those supplied and approved by Babylove.
- When making adjustments to the stroller, ensure that your child's body is clear of any moving parts on the stroller, otherwise they may be injured.
- Always apply all of the brakes when parking the stroller. The stroller may roll away even if left unattended for a few moments.
- Use the tether strap to prevent the stroller from rolling away.
- Check that all safety locks are engaged before placing a child in the stroller.
- Always raise the leg support to its highest position when transporting a baby. This will reduce the risk of the baby falling out through the front of the stroller.
- Remove the child from the stroller before going up or down stairs and escalators.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire or a barbecue, etc.
- Do not run while using this product.
- Do not lift the stroller by the bumper bar. It may disengage.
- Always lock the front swivel wheel when on uneven surfaces to minimize wheel wobble.

RECOMMENDATION

Some strollers have backrests adjustable between an upright and reclined position. The upright positions are not suitable for use with children less than six months old. As a guide, the lowest recline position should be used to transport babies, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

SAFETY WARNING

The sun is very strong. **DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN.** The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

CLEANING

- To clean vinyl and metal parts wipe with a clean wet cloth and a mild soap and water solution.
- To clean woven fabric use upholstery cleaner such as normally used on furniture or a mild soap and water solution. Allow fabrics to air dry, out of direct sunlight.
- Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.

CARE AND MAINTENANCE

- Check the main components and other parts operate freely and are secure. Check regularly for wear & tear, loose fasteners and damage. Tighten any loose fasteners. Replace any worn or damaged parts immediately using only Babylove approved parts.
- Moving parts may require occasional lubrication with a dry lubricant or a silicon based spray lubricant. This will help to avoid squeaks.
- Exposure to direct sunlight will fade most fabrics over time. To limit the effect of UV fading, avoid leaving the stroller in direct sunlight where practicable.


MODEL VARIATIONS

- Not all models will have features such as rain covers, canopy windows, etc.
- Note that the fabric patterns and colours pictured on the stroller in this instruction manual may vary from that of the product that you have purchased.

2. TO REMOVE THE 'SNAP N GO' INFANT CARRIER FROM THE STROLLER



NOTE - Ensure that the child is harnessed in the 'Snap N Go' Infant Carrier according to the 'Snap N Go' instructions.

- A. Engage the brakes.
- B. Raise the 'Snap N Go' handle upright and lock it into position. Press both buttons and hold them in. Then continue to rotate the handle slightly forwards and then release. Rotate the handle up over the canopy. Check the handle is locked in the upright position.
- C. To release the 'Snap N Go' from the stroller, locate the release latch on the back (head end) of the Infant Carrier. Squeeze up and hold in to release locks. Lift the Infant Carrier up by the handle and remove from the stroller.
- D. Replace the fabric covers over the mounting slots.

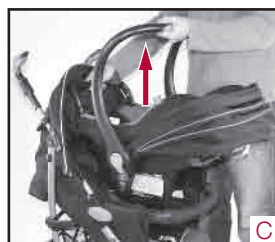



PARTS LIST

- A. 1 - Stroller frame
- B. 1 - Canopy
- C. 1 - Cup Holder
- D. 2 - Front wheels
- E. 2 - Rear wheels & brake cable
- F. 1 - Front footrest
- G. 1 - Footrest Cap and Cap Cover
- H. 1 - Armbar

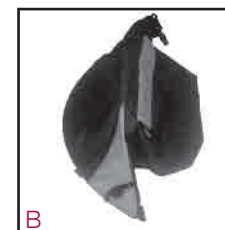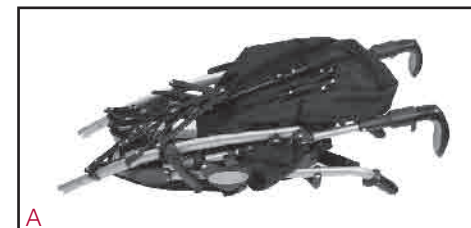

1. ASSEMBLING THE STROLLER

- A. Release the storage latch on the side of the stroller frame. Squeeze the frame together if necessary.
- B. Lift the frame up by the handles, the stroller will partially open.
- C. Push down on the lower locking bar until the frame is fully opened and locked.
- D. Check that both the upper hinge and lower locking bar are fully engaged.

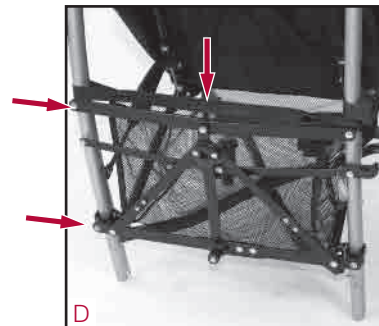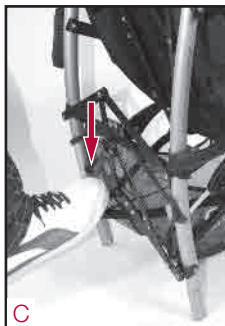

1. TO CONNECT THE 'SNAP N GO' INFANT CARRIER TO THE STROLLER


WARNING - The front bumper bar must be fitted and securely locked onto the armrests.

NOTE - Ensure that the child is harnessed in the 'Snap N Go' Infant Carrier according to the 'Snap N Go' instructions.

- A. Engage the brakes and place the stroller backrest into the fully reclined position.
- B. Open the fabric covers on each armrest of the stroller. The mounting slots for installing the 'Snap N Go' are now visible.
- C. Hold the 'Snap N Go' by the carry handle, and also if you prefer, by the front rebound bar. Face the feet end of the 'Snap N Go' towards the stroller backrest.
- D. Lower the 'Snap N Go' into the exposed mounting slots. Press down firmly on both sides until you hear it click and it locks into place.

NOTE - Ensure that the 'Snap N Go' is locked into place by pulling up on both sides. Do not use the Infant Carrier if it is not correctly installed.

- E. Fold the 'Snap N Go' handle down if you prefer. Press both buttons and hold them in. Then rotate the handle slightly backwards and then release. Continue to rotate the handle back over the canopy. Push down until it locks.
- F. Adjust the canopy for child's comfort.

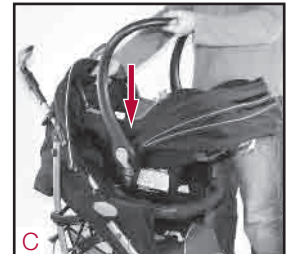

BABYLOVE INFANT CARRIER ATTACHMENT (WHERE APPLICABLE)

WARNINGS - This stroller is only approved for use with Babylove's 'Snap N Go' Infant Carrier.

- Do not leave the child in the carrier for extended periods.
- The carrier is designed to provide mobility outside of the car but it should not be used instead of an appropriate.
- The carrier must be correctly fitted and locked into the stroller.
- The carrier must only be used with a Babylove stroller with compatible attachments.
- To be used only in a rearward facing position for a child weighing up to 9kgs and with a length of up to 700mm.

In the event of doubt about the method of installation, contact Babylove.

NOTE: The Infant Carrier must be removed from the frame before folding.

NOTE: Do not use this Infant Carrier with any other stroller.

NOTE: Ensure the baby is secured in the Infant Carrier with the harness at all times. The Infant Carrier has been fitted with a hood when using with the stroller. The hood may also be used in the car.

NOTE: The 'Snap N Go' Infant Carrier cannot be fitted to the stroller if another child is seated in the stroller. Ensure that the child is harnessed in the 'Snap N Go' Infant Carrier according to the 'Snap N Go' instructions.





2. TO ASSEMBLE THE ARMBAR

- A. Locate the armbar end into the armrest slot. Push up the button on the underside of armrest and push the armbar in. Repeat for other side.
- B. To open one side only. Push up on button on underside of armrest. To remove, push up both buttons.





3. TO ATTACH THE REAR WHEELS

- A. Roll the frame forward to lay the frame face down on the floor.
- B. Position the rear wheels on the rear legs, with the large RED brake lever on the right hand side of the stroller.
- C. Slide the wheels down the leg tubes until they reach the pin. Press in the pin and continue to slide the wheel over the pin until locked. Pull on the wheels to make sure they are locked on to the rear legs.
- D. Locate the brake cable on to the plastic clips on the rear frame bars.

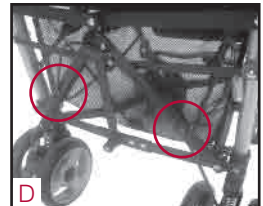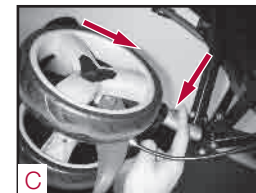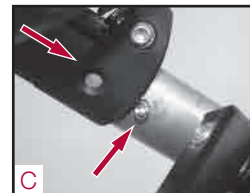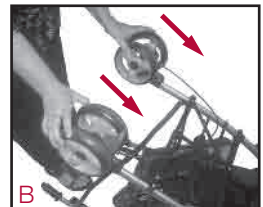

4. TO ATTACH THE FOOTREST

- A. Align the footrest as shown over the two holes. Press the pins into the mouldings.
- B. Secure on the underside with the caps provided. Snap cap (1) onto the pins first, then engage cap cover (2).

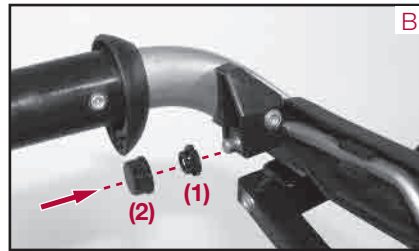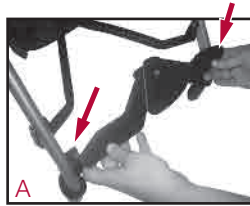

5. TO ATTACH THE FRONT WHEELS


- A. Slide the front wheel assembly on to the front leg of the stroller. Ensure that the larger hole on the swivel housing is pushed on first (with the swivel lock lever toward the top). Push until the wheel clicks into position. Gently pull on the front wheel assembly to ensure it is correctly engaged. Repeat the procedure for the other front wheel assembly.
- B. To remove the front swivel wheels, depress the tab located under the front swivel post and slide the wheels off.



15. TO ADJUST THE HANDLE POSITION

NOTE: THE PISTOL GRIP HANDLES ON THE STROLLER CAN BE ROTATED AROUND TO ANY ONE OF 16 DIFFERENT POSITIONS TO SUIT YOUR COMFORT.



- A. To adjust the handle position, pull upward on the lever directly below the pistol grip handle and then rotate the handle to the desired position. Release the lever again to lock the pistol grip handle. Repeat this method to adjust the other pistol grip handle to the same orientation.

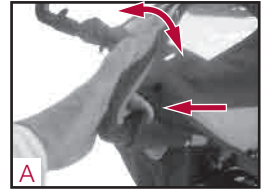

16. TO FOLD THE STROLLER

Before folding the stroller ensure that the canopy is back and the seat is in the fully upright position.

- A. Lift the main fold lock upward with your foot to disengage
- B. Then push down with your foot to release the secondary safety lock then push the handles forward and downward to fold the stroller.
- C. Check that the storage hook has locked to the frame of the stroller to secure. Squeeze the frame together if necessary. A carry handle has been provided for convenience.

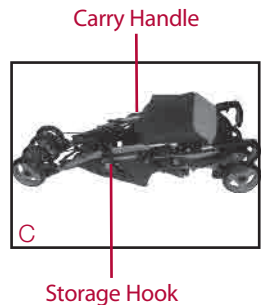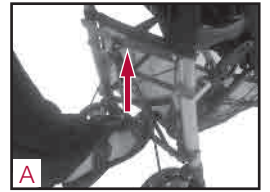

13. TO ADJUST THE SEAT RECLINE

NOTE: THE SEAT HAS 5 RECLINE POSITIONS.

- A. Press the release buttons on both backrest recline mechanisms and then lower the seat's backrest to the desired position. Release the buttons to lock the backrest again.
- B. To raise the backrest again, push the seat upward until the desired position is reached.



DO NOT ADJUST THE BACKREST WHILE YOUR CHILD IS IN THE STROLLER.

14. TO USE THE TETHER STRAP

WARNING: Use the tether strap to prevent the stroller from rolling away.

NOTE: A tether strap is fitted to this stroller, place the loop over the desired wrist when using this stroller.

- A. Should you need to change wrist, remove the stroller strap and apply to the other handle. To ensure a tight fit, loop the tether strap around rather than over the handle. Open the end of the tether strap and insert the opposite end through opening created. Pull until tether strap tightens around handle.




6. TO LOCK THE FRONT SWIVEL WHEELS

- A. To prevent the front wheels from swivelling on uneven or rough surfaces, push down on the swivel lock on each pair of front wheels. Pull up on each swivel lock again to unlock the front swivel wheels.



7. TO ADJUST THE LEG REST


- A. To adjust the leg rest, lift up the end of the seat until it locks into place. To lower the leg rest, press the lever on both sides of the leg rest and then lower it.

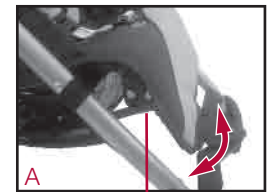

Lever


8. TO ATTACH THE CANOPY

- A. Attach the canopy to the stroller by pushing the clips into the moulding as shown. Also attach the upper part of the canopy to the stroller with the hook and pile loop.
- B. Attach the canopy backflap to the hook and pile located behind the seat.
- C. To remove the canopy, pull up with some upward force on the clips and undo the hook and pile loop.

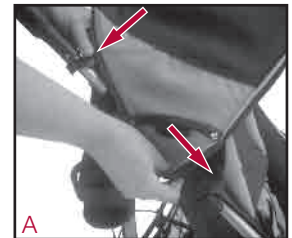

9. TO USE AND ADJUST THE CANOPY

- A. The canopy is hinged to allow it to open. Gently push the front of the canopy forward to open it as desired. Press the side hinges of the canopy down to lock it in the open position. Ensure the rear flap of the canopy is attached to the rear of the backrest with the hook and pile.
- B. To open the canopy window roll the flap away from the canopy. Attach with elastic loop and toggle.
- C. To extend the canopy visor pull the visor out from the canopy.

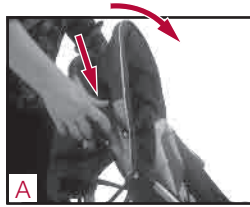

10. TO ATTACH THE CUP HOLDER

- A. Locate the cup holder over the frame moulding and push on by applying some downward force until locked on.
- B. Reverse procedure to remove cup holder.




11. TO OPERATE THE BRAKES

NOTE: THE REAR BRAKES ARE DESIGNED TO BE ACTIVATED WITH YOUR FOOT.

- A. Lightly step on the brake lever of the right-side rear wheel and push it down to engage. The left-side brake will also engage via the cable link. Gently push the stroller forward to ensure brakes are fully engaged.
- B. To release the rear brakes lift the right-side brake lever upward.

WARNING: ALWAYS APPLY REAR BRAKES WHEN PARKING THE STROLLER.

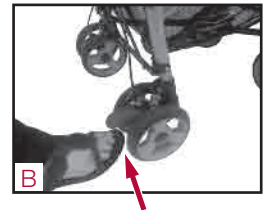

12. TO SECURE YOUR CHILD IN THE HARNESS

WARNING: Use this harness at all times.

A five-point harness is provided to restrain your child. To secure the child in the harness, push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom prongs.

