

# TANDEM LITE

## CLEANING

- To clean vinyl and metal parts wipe with a clean wet cloth and a mild soap and water solution.
- To clean woven fabric use upholstery cleaner such as normally used on furniture or a mild soap and water solution. Allow fabrics to air dry, out of direct sunlight.
- Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.

## CARE AND MAINTENANCE

- Check the main components and other parts operate freely and are secure. Check regularly for wear & tear, loose fasteners and damage. Tighten any loose fasteners. Replace any worn or damaged parts immediately using only Babylove approved parts.
- Moving parts may require occasional lubrication with a dry lubricant or a silicon based spray lubricant. This will help to avoid squeaks.
- Exposure to direct sunlight will fade most fabrics over time. To limit the effect of UV fading, avoid leaving the stroller in direct sunlight where practical.

## MODEL VARIATIONS

- Note that the fabric patterns and colours pictured on the stroller in this instruction manual may vary from that of the product that you have purchased.



Thank you for purchasing this quality Babylove product from our exclusive range of baby products.

We are confident that you will appreciate its many highlights including durability and reliability.

Your new product has been manufactured to comply with the Australian Standard AS/NZS 2088: and comes with a 12 month warranty.

Please keep this instruction manual for future reference.

Distributed by Nursery Elegance Pty Ltd  
ACN 122 443 387  
Unit 10, 339 Williamstown Road  
Port Melbourne VIC 3207, Australia  
PHONE 1300 131 477  
WEB [www.babylove.com.au](http://www.babylove.com.au)  
EMAIL [info@Babylove.com.au](mailto:info@Babylove.com.au)

## INSTRUCTION MANUAL


## WARNINGS

- Follow the manufacturer's instructions.
- Do not leave children unattended.
- Put on all the brakes whenever you park the stroller. The stroller may roll away even if left unattended for a few moments.
- Use the tether strap to prevent stroller from rolling away.
- Do not carry extra children or bags on this stroller.
- Make sure children are clear of any moving parts if you adjust the stroller; otherwise they may be injured.
- Always keep children in view when in the stroller.
- Avoid serious injury by always using the harness.
- Periodically check the harness to ensure it is secured.
- Always make sure the stroller is fully open and locked before use.
- Do not use your stroller on stairs or escalators.
- Do not allow children to climb into the stroller unassisted as the stroller may tip over and injure children.
- Care should be taken when folding and unfolding stroller to prevent finger entrapment.
- To avoid serious injury do not use your stroller if it has become damaged or broken.
- Do not use stroller near open fire or exposed flame.
- Do not use accessories other than those supplied by Babylove.
- Maximum weight capacity in each seat is 17kg. The front seat does not feature a full recline, it is not suitable for a child under 6 months.
- Maximum weight capacity of the basket is 5kg.
- Maximum weight capacity of the back pocket is not to exceed 1kg.

## PARTS LIST

Please ensure you have received the following parts that need to be assembled on your stroller.

- 1 x stroller
- 2 x front wheel assemblies
- 1 x rear wheel assembly
- 2 x rear wheels including ring, safety cap and hub cap
- 1 x bumper bar
- 1 x canopy

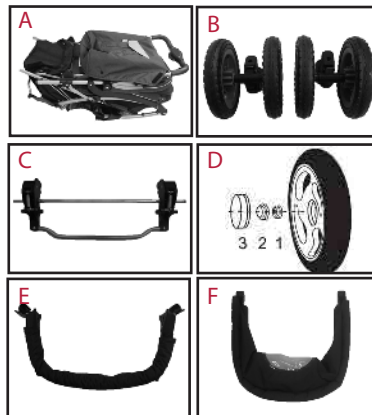

## 12. USING THE TETHER STRAP

**WARNING:** Use the tether strap to prevent the stroller from rolling away.


Note: A tether strap is fitted to this stroller, place the loop over desired wrist when using the stroller.



- Should you need to change wrist, loosen the tether strap and slide to desired side of the handle. If the tether strap is removed attach by looping over the handle. Open the end of the tether strap hanging over handle and insert the opposite end through the opening created. Pull until tether strap tightens around handle.

## 10. FOLDING THE STROLLER

- A Before folding the stroller ensure that the front canopy is back, the seats are in the fully upright position, all items are removed from the basket and lock the rear brakes.
- B Stand behind the stroller and release the frame folding locks:
  - B1. Using your right hand push button across to left and hold
  - B2. Squeeze the button on the under side of the handle and hold.
  - B3. Using your left hand pull the side frame lock towards you and push the handle forwards part way.
- C Move around to the side of the stroller and squeeze the frame closed.
- D Apply the frame lock.

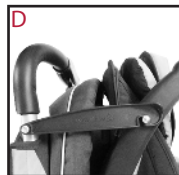

## 11. USING THE BASKET

Raise the seat backrest before putting in and taking out items from the basket.

- A The basket features side zip access for ease of use.

Note: The basket maximum weight capacity is 5kgs.



## 1. OPENING THE STROLLER




- A Release the storage hook on the side of the stroller frame.
- B Place your foot on the rear axle and pull the handle towards you until the frame engages.

Note: Ensure that both sides of the frame are locked by pushing forwards on the handle.



## 2. ATTACH REAR WHEEL ASSEMBLY AND WHEELS

- A Take the rear wheel assembly, making sure the brake lever is facing out. Attach to frame, making sure pins are aligned and engage with the axle holes.
- B Fix the rear wheels to the axle.
- C Install rear wheel in the following order, wheel, ring, safety cap and hub cap. Pull against the wheel to test engagement.

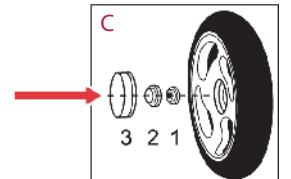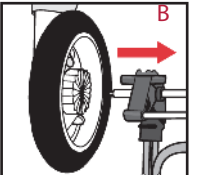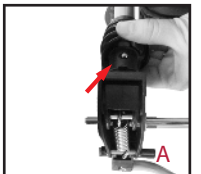

## 3. ATTACH THE FRONT WHEELS

- A Slide the front wheel assembly onto the front leg of the stroller. Ensure the swivel lock lever is at the top. Push until the wheel clicks into position. Pull against the wheel to test engagement.



### 3. ATTACH THE FRONT WHEELS CONT...

- B To remove the front swivel wheel push the metal pin at base of assembly until the wheel releases then pull away from stroller frame.



### 4. OPERATING THE FRONT SWIVEL LOCKS

- A To lock the swivels on uneven or rough surfaces, pull up on the swivel lock. Repeat on second wheel. Push down on each swivel lock to unlock the swivel.



### 5. OPERATING THE REAR BRAKES

**WARNING:** Always apply rear brake when parking the stroller. The stroller may roll away even if left unattended for a few moments.

- A Lightly step on the brake lever and push down to engage. Gently push the stroller forward to ensure brakes are fully engaged. To release lift the brake lever upward.



### 6. ATTACHING THE FRONT CANOPY

- A Attach canopy by sliding both tabs onto the brackets of the frame until they lock into place. To remove slide the tabs forward.
- B To open window pull flap away from canopy and roll up, secure with elastic and toggle.





Note: The front canopy can be adjusted by pivoting forward or backwards. The rear canopy does not pivot.

### 7. ATTACHING THE FRONT BUMPER BAR

Note: The stroller can fold with the front bumper bar fitted.

- A To fit the front bumper bar open the bumper bar locks.
- B Align the locks between the plastic guides on the stroller frame. Engage by closing the bumper bar locks. To remove open bumper bar locks.

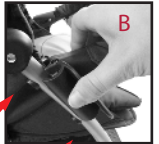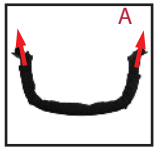

### 8. ADJUSTING THE SEAT RECLINE

Note: The rear seat has 4 recline positions including full recline suitable for a newborn. The front seat has 2 recline positions and is not suitable for a newborn.

- A To adjust both front and rear seats, fully release seat lever located on the back of each seat. Continue holding lever open and tilt seat to desired position. Release lever to lock backrest position.



**Caution:** Ensure that your child's limbs are in the centre of the seat before adjusting the backrest. Do not adjust the seat recline when the child's weight is against the backrest.

### 9. ADJUSTING THE HARNESS

**WARNING** Avoid serious injury, always use the full harness set correctly adjusted.

- A With the child in the seat, place the harness straps around the child's shoulders and waist. Lift the crotch strap between the child's legs. Clip the waist strap buckles into either side of the crotch strap housing. Adjust all the straps to be a firm but comfortable fit on the child. To release the harness, squeeze the buckle prongs at the top and bottom of the crotch strap housing and gently pull to release.

