


IMPORTANT:KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

# ROCK A BABY

## BABY ROCKER WITH TOY BAR

INSTRUCTION BOOK

Series LX9o68

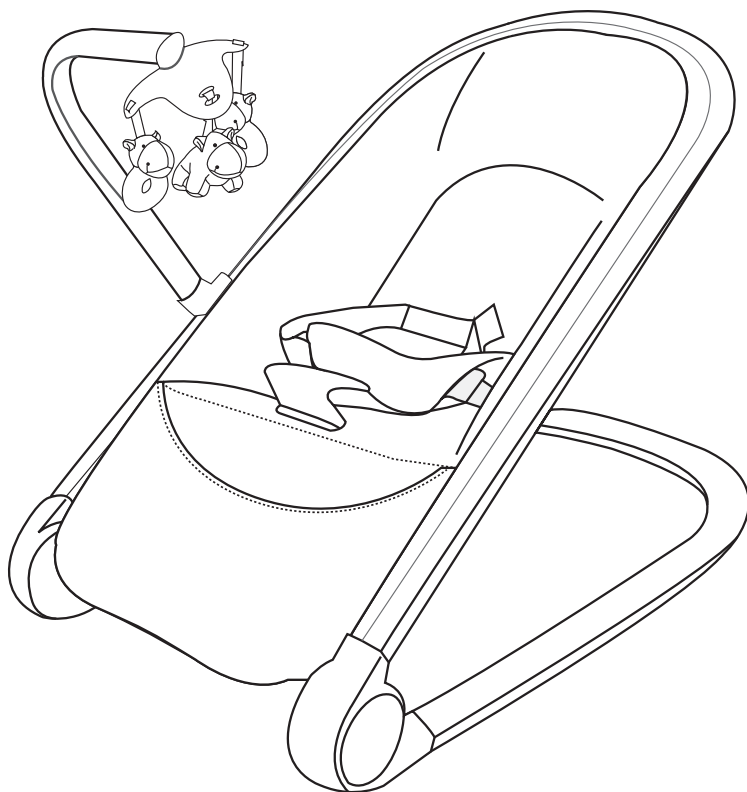

# WARNINGS

---

ALWAYS FOLLOW THE MANUFACTURERS INSTRUCTIONS.  
READ ALL INSTRUCTIONS CAREFULLY BEFORE ASSEMBLY AND USE  
OF THIS ROCKER.  
THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS  
ESSENTIAL.

 **WARNING:** THE CHILD SHOULD BE SECURED IN THE  
ROCKER AT ALL TIMES WITH THE CROTCH STRAP. NEVER USE  
LAP BELT ONLY.

## WARNINGS:

- DO NOT LEAVE CHILDREN UNATTENDED, DIRECT ADULT SUPERVISION IS REQUIRED AT ALL TIMES.
- ENSURE YOUR CHILD IS SECURED WITH A CORRECTLY ADJUSTED SAFETY HARNESS.
- USE THE HARNESS AT ALL TIMES.
- WHEN MAKING ADJUSTMENTS TO THE ROCKER, ALWAYS ENSURE THAT YOUR CHILD'S BODY IS CLEAR OF ANY MOVING PARTS.
- DO NOT USE THIS ROCKER ONCE YOUR CHILD CAN SIT UNAIDED.
- THIS ROCKER IS NOT INTENDED FOR PROLONGED PERIODS OF SLEEPING.
- THIS ROCKER DOES NOT REPLACE A COT OR A BED. SHOULD YOUR CHILD NEED TO SLEEP, THEN IT SHOULD BE PLACED IN A SUITABLE BED OR COT.
- DO NOT USE THE ROCKER ON AN ELEVATED SURFACE, E.G. TABLE.
- USE THE ROCKER ON A FLAT, EVEN AND HORIZONTAL FLOOR AND NEVER USE NEAR STAIRS.

# WARNINGS

---

## WARNINGS:

- NEVER USE THE TOY BAR TO CARRY THE ROCKER.
- REMOVE YOUR CHILD FROM THE ROCKER BEFORE MOVING OR TRANSPORTING.
- DO NOT ALLOW CHILDREN TO USE THE ROCKER AS A TOY OR INTERFERE WITH THE ROCKER WHEN IN USE.
- DO NOT LEAVE THE ROCKER AND ITS ACCESSORIES NEAR AN OPEN FIRE OR EXPOSED FLAME.
- DO NOT POSITION THE ROCKER NEAR ANY WINDOW COVERING CORDS, ELECTRICAL CORDS OR ANY OTHER LOOSE CORDS OR CABLES.
- DO NOT USE THE ROCKER IF ANY COMPONENTS ARE BROKEN OR MISSING.
- DO NOT USE ACCESSORIES OR REPLACEMENT PARTS OTHER THAN THOSE APPROVED BY THE STEELCRAFT.
- THE WEIGHT OF THE CHILD USING THIS PRODUCT SHOULD NOT EXCEED 9KG.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

# 1. TO OPEN THE ROCKER

---

**!** **WARNING:** ENSURE THAT ALL THE LOCKING DEVICES ARE ENGAGED INTO POSITION BEFORE USE.


- A** Hold the bottom rail of the rocker with one hand, and simply pull the backrest upwards until it fully opens. You should hear a “click” sound as the frame locks into position. The seat is now in the upright position.




## 2. TO ATTACH THE TOY BAR

**!** **WARNING:** NEVER USE THE TOY BAR TO LIFT OR CARRY THE ROCKER.

**A** Attach the three toys to the toy bar by threading the fabric strip on each of the toys through the slots located on the plastic moulding and attach hook and loop to secure.

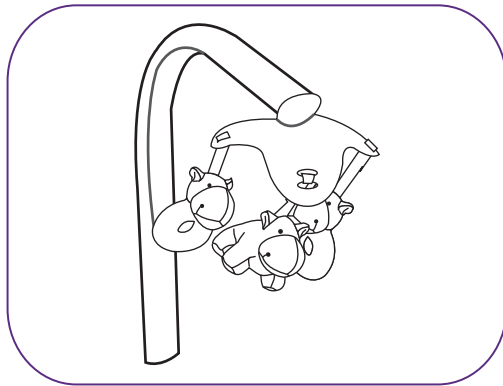

**B** Attach the toy bar socket to the side of the rocker by pushing the clip attachment onto the side rail and then insert the toy bar.

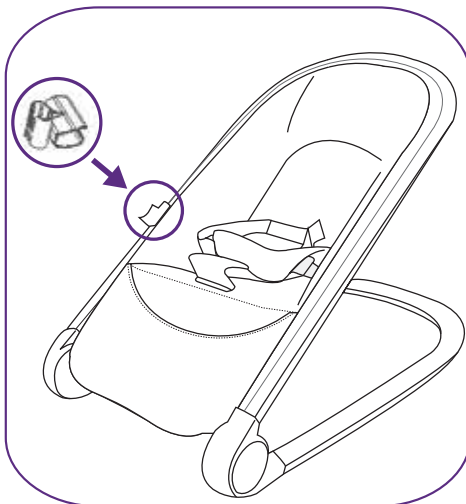


### 3. SECURING YOUR CHILD IN THE HARNESS

---

**⚠️ WARNING:** THE CHILD SHOULD BE SECURED IN THE ROCKER AT ALL TIMES WITH THE CROTCH STRAP. NEVER USE LAP BELT ONLY. ADJUST THE LAP BELT TO FIT FIRMLY BUT COMFORTABLY AROUND THE CHILD.

- A** Place the child in the rocker and position the crotch strap between the child's legs. Thread the lap belt buckles through the crotch strap and push both buckle prongs (A) into the buckle housing (B) until the buckle prongs lock into position. For the child's comfort, slide the buckle into the crotch strap.

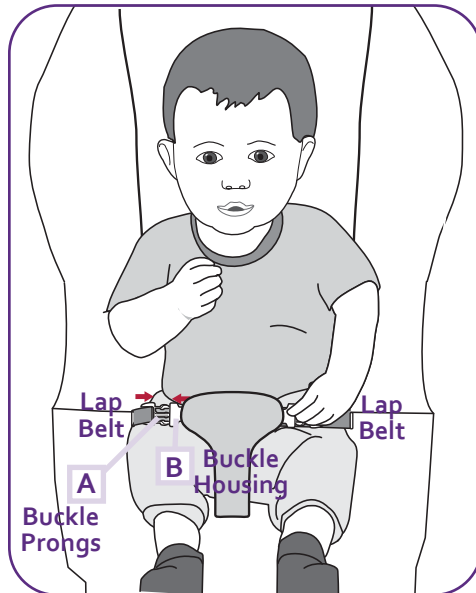


- B** Tighten or loosen the lap belt by feeding and pulling the belt through the back of the buckle prongs. The lap belt needs to fit firmly around the child.

### 3. SECURING YOUR CHILD IN THE HARNESS (Cont.)

---

**B** To release the buckle, squeeze the top and bottom buckle prongs with enough pressure so the buckle prongs release from the buckle housing.


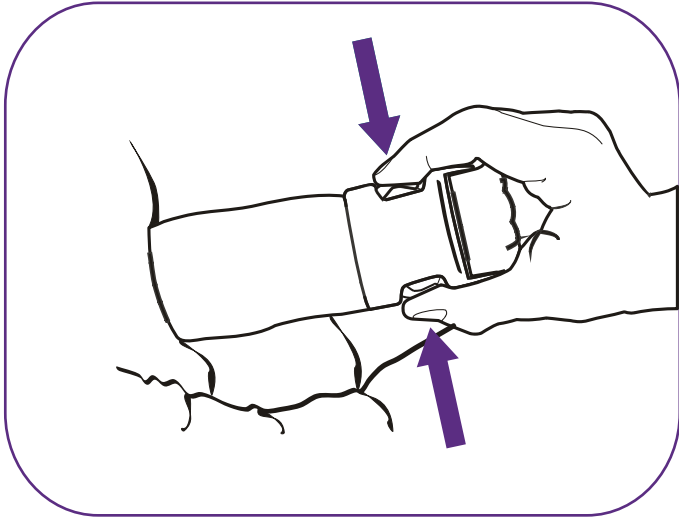


## 4. USING THE STATIC AND ROCKING MODES

---

**!** **WARNING:** REMOVE THE CHILD FROM THE ROCKER BEFORE ADJUSTING THE ROCKER INTO STATIC OR ROCKING MODES.

- A** To set the rocker into a static position, rotate the front stand outwards.
- B** To set the rocker into the rocking position, rotate the front stand inwards.

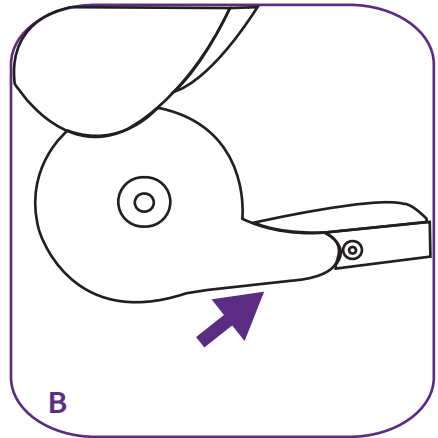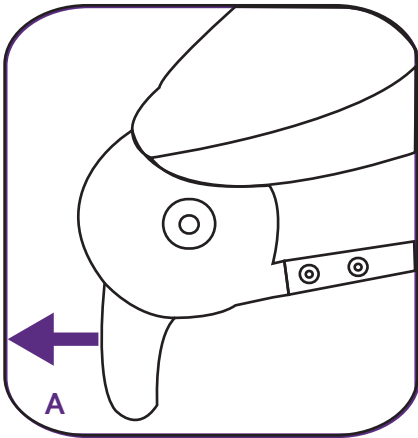





# 5. TO RECLINE THE SEAT

---

## WARNINGS:

- THE UPRIGHT POSITIONS ARE NOT SUITABLE FOR USE WITH CHILDREN LESS THAN 6 MONTHS OLD.
- REMOVE THE CHILD FROM THE ROCKER BEFORE ADJUSTING THE SEAT POSITION.
- NEVER ADJUST THE SEAT WHILE THE ROCKER IS OCCUPIED.


**A** There are two seat positions for the rocker. No. 1 - Upper Position and No. 2 - Lower position.  
The recline position indicators on both of the front hinges show the selected seat position.

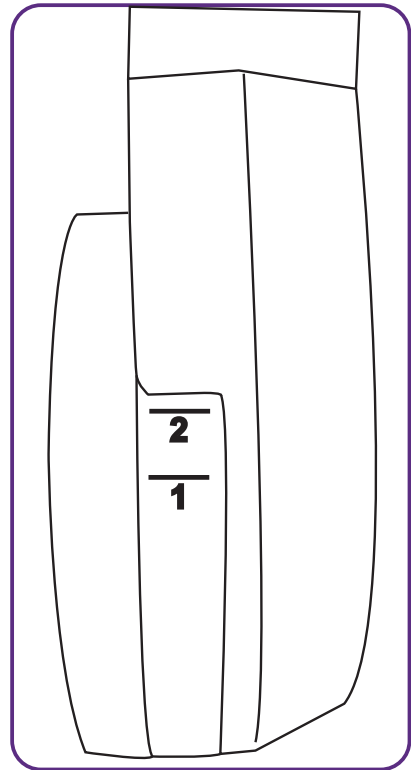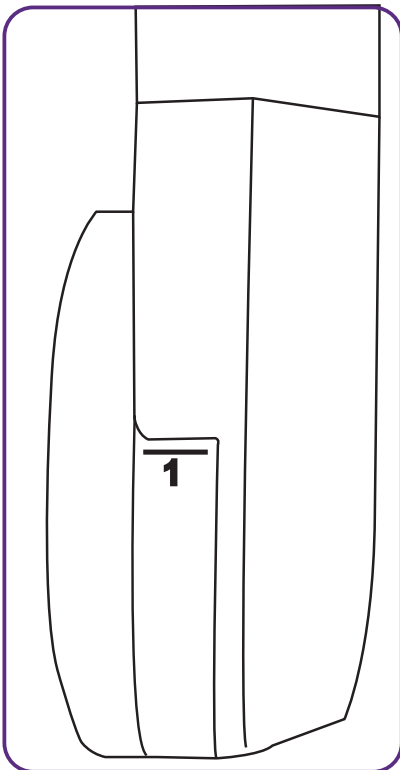

## 5. TO RECLINE THE SEAT (Cont)


---

- B** To adjust the seat hold the bottom rail with one hand and with the other hand, hold the lever and lift the backrest and then squeeze both sides of the lever in and adjust the backrest up or down to the desired position. Release the lever when in the desired position.

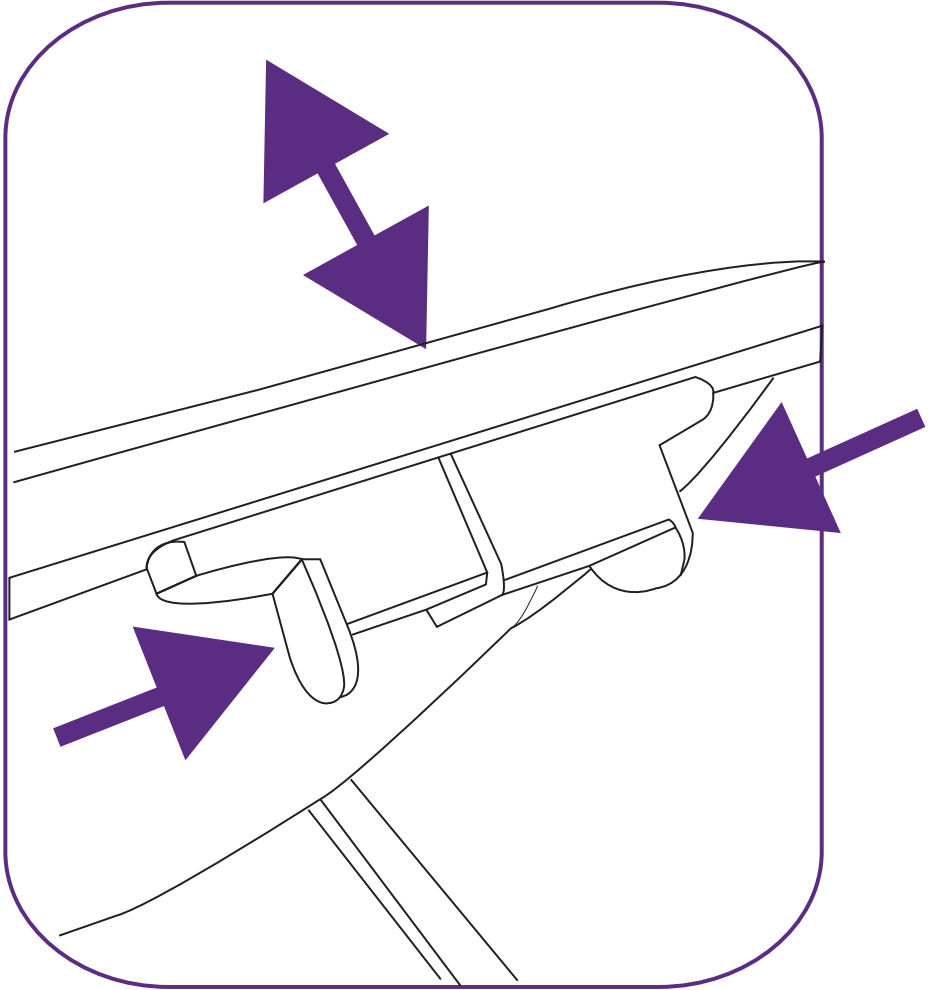


# 5. TO RECLINE THE SEAT (Cont)

---

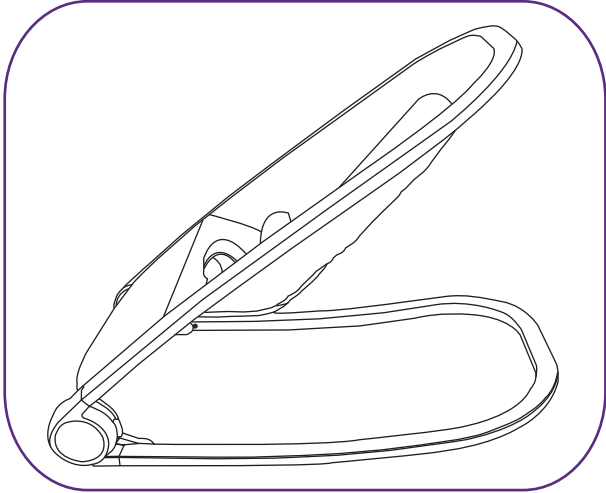

No. 1 - Upper position

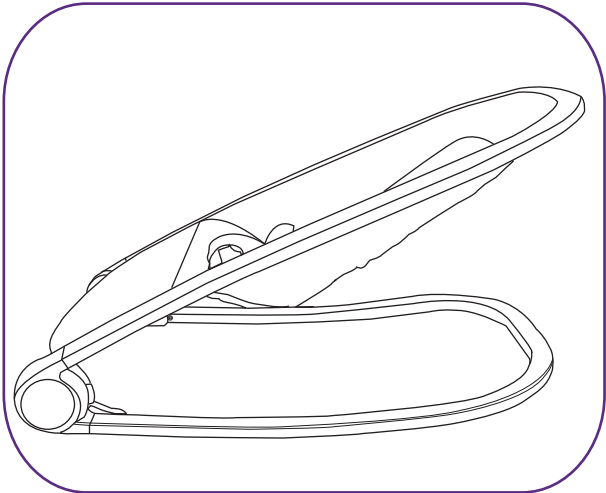

No. 2 - Lower position

## 6. TO FOLD THE ROCKER



---



### IMPORTANT NOTE:

REMOVE THE CHILD FROM THE ROCKER BEFORE COMMENCING ANY FOLDING OPERATION.

- A** With one hand squeeze both sides of the lever in and hold and with the other hand press the safety lock button located on the front hinge. Lower the frame until the seat is flat against the bottom rail.

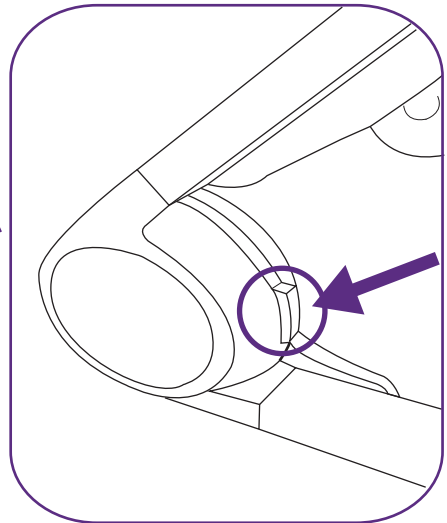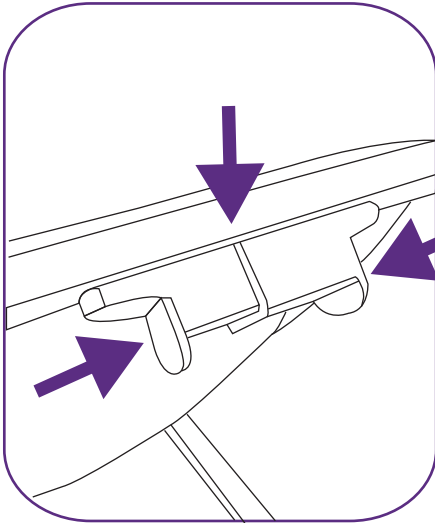

# CARE & MAINTENANCE

---

- To prolong the life of your rocker keep it clean and do not leave it in the direct sunlight for extended periods of time.
  - Removable fabric covers and trims may be cleaned using warm water with a household soap or mild detergent. Allow it to dry fully, preferably away from the direct sunlight.
  - Non removable fabric covers and trims may be spot cleaned using a damp sponge with soap or a mild detergent. Allow it to dry completely before folding or storing it away.
  - In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.
  - When using your rocker at the beach - completely clean your rocker afterwards to remove any sand and salt. Sand and salt will cause premature wear and corrosion.
  - To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Steelcraft.
  - Always check parts regularly for tightness of screws, nuts, and other fasteners - tighten if required.
- To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

Customer Service Ph: 1300 131 477 Email: [info@babylove.com.au](mailto:info@babylove.com.au)

Distributed by:  
Nursery Elegance Pty. Ltd.  
ACN: 122 443 387  
6 Thorpe Street,  
Sunshine, Victoria, 3020, Australia

Due to our continuing program of development, Nursery Elegance reserves the right to alter the specifications, colour or design without any further notice.

The Babylove trademark is the property of Nursery Elegance Pty. Ltd.

Due to the variations in the style and design of our products the illustrations used in this instruction book are generic.

This product is designed to comply with EN12790 standard.

2015 Copyright Nursery Elegance Pty. Ltd. Australia