

WARRANTY

Thank you for purchasing this quality Babylove product from our exclusive range of baby products.

We are confident that you will appreciate its many highlights including durability and reliability.

Your new product has been manufactured to comply with the Australian Standard AS/NZS 2088 and comes with a 12 month warranty.

Please keep this instruction manual for future reference.

Distributed by Nursery Elegance Pty Ltd
ACN 122 443 387
Unit 10, 339 Williamstown Road
Port Melbourne VIC 3207, Australia
PHONE 1300 131 477

WEB - www.babylove.com.au

EMAIL - info@Babylove.com.au

MAXIMA Stroller



INSTRUCTION MANUAL

WARNINGS

IMPORTANT: RETAIN FOR FUTURE REFERENCE

READ THESE INSTRUCTIONS CAREFULLY AND KEEP THEM FOR FUTURE REFERENCE. THE CORRECT USE AND MAINTENANCE OF THIS PRODUCT IS ESSENTIAL.

- Do not leave children unattended.
- Follow the manufacturers instructions.
- Ensure your child is secured with a correctly adjusted safety harness.
- Do not carry additional children or bags on the stroller.
- Do not allow children to stand on the seat, the stroller may tip over.
- Do not hang bags or goods from the handle as this could cause the stroller to tip over.
- Do not place more than 4kg in the basket, or 1kg in the canopy pocket (if supplied).
- The weight of the child using this product should not exceed 17kg.
- Do not use accessories other than those supplied by Babylove.
- When making adjustments to the stroller, ensure that your child's body is clear of any moving parts on the stroller, otherwise they may be injured.
- Always apply all of the brakes when parking the stroller. The stroller may roll away even if left unattended for a few months.
- Use the tether strap to prevent the stroller from rolling away.
- Check that all safety locks are engaged before placing a child in the stroller.
- Remove the child from the stroller before going up or down stairs and escalators.
- To prevent the risk of the stroller catching fire, do not park it near an exposed heat source such as a radiator, an open fire, or a barbecue, etc.
- Do not run while using this product.
- Do not lift the stroller by the bumper bar it may disengage.
- Always lock the front swivel wheels when on rough surfaces it will help eliminate wheel wobble.

RECOMMENDATION

Some strollers have backrests adjustable between and upright and reclined position. The upright positions are not suitable for use with children less than six months old. As a guide, the lowest recline position should be used to transport babies, the backrest can be adjusted to a more upright position as the child grows older and is able to support its head without assistance.

SAFETY WARNING

The sun is very strong. DO NOT LEAVE YOUR CHILD EXPOSED TO THE SUN. The canopy or hood on this product will not give your child total protection from the harmful rays of the sun.

CLEANING

- To clean vinyl and metal parts wipe with a clean wet cloth and a mild soap and water solution.
- To clean woven fabric use upholstery cleaner such as normally used on furniture or a mild soap and water solution. Allow fabrics to air dry, out of direct sunlight.
- Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.

CARE AND MAINTENANCE

 
- Check the main components and other parts operate freely and are secure. Check regularly for wear & tear, loose fasteners and damage. Tighten any loose fasteners. Replace any worn or damaged parts immediately using only Babylove approved parts.
- Moving parts may require occasional lubrication with a dry lubricant or a silicon based spray lubricant. This will help to avoid squeaks.
- Exposure to direct sunlight will fade most fabrics over time. To limit the effect of UV fading, avoid leaving the stroller in direct sunlight where practical.

MODEL VARIATIONS

- Note that the fabric patterns and colours pictured on the stroller in this instruction manual may vary from that of the product that you have purchased.


1. TO OPEN THE STROLLER

- A. Hold the stroller by the handles and release the storage latch. Squeeze the frame together if necessary.
- B. Lift the handles and allow the front legs to drop towards the floor. Do not try to open the stroller by forcing the handles apart.
- C. Push down on the lower locking bar until the frame is fully opened and locked.
- D. Check that both the upper hinge and lower locking bar are fully engaged.

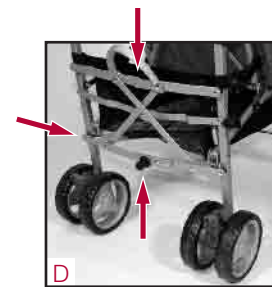


2. TO ASSEMBLE & REMOVE THE FRONT SWIVEL WHEELS

 - A. Take each front swivel wheel assembly and press it onto each of the front legs.
- B. Check that each wheel is fully engaged and secured by pulling against it.
- C. To remove the front swivel wheels, use an object such as a screwdriver to press the black tabs on the wheel stem. The wheel will release and can be lifted off.

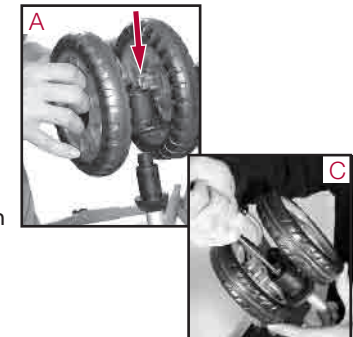

3. TO USE THE SWIVEL WHEELS

 - A. Lift the locking clip up to lock the swivel wheels. The swivel wheels can only be locked when the wheels are in the trailing position (wheels under frame).
- B. Push the locking clip down to allow the wheels to swivel.

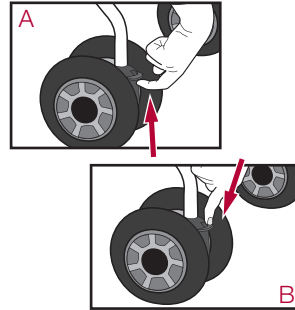


NOTE: Always lock the swivel wheels when using the stroller on rough surfaces it will minimise wheel wobble.

4. TO USE THE BRAKES

WARNING: Always apply the brakes when parking the stroller. The stroller may roll away even if left unattended for a few moments.

 
- A. Push down on each brake lever to lock the brakes.
- B. Lift each brake lever up to release the brakes.

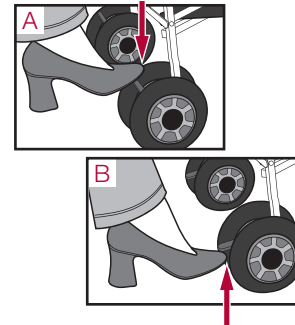

5. TO SECURE YOUR CHILD IN THE HARNESS

WARNING: Use this harness at all times.

 A five-point harness is provided to restrain your child. To secure the child in the harness, push buckle (A) and (B) into the buckle housing (C) until the buckle prongs snap into position. Carefully adjust the harness by pulling the slider (D) until the desired fit is achieved in the lap, shoulder and crotch straps. Always adjust the harness when changing the seating position of the child. To release the buckle, squeeze the top and bottom prongs.

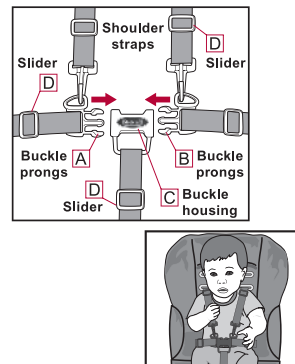

HELPFUL HINTS

If the wheels squeak - use a silicon based spray or light oil ensuring it penetrates the wheel and axle assembly.

When using your stroller at the beach - completely clean your stroller afterwards to remove the sand and salt from the mechanisms and wheel assembly.

If there are compression marks on the tyres - use a domestic hair dryer to gently warm the tyre and the compression marks should slowly disappear. (DO NOT OVERHEAT).

DO NOT DRY CLEAN, OR USE BLEACH.

Do not machine wash, tumble or spin dry, unless the care labelling on the product permits these methods.

Non removable fabric covers and trims may be cleaned using a damp sponge with soap or mild detergent. Allow it to dry completely before folding or storing it away.

In some climates the covers and trims may be affected by mould and mildew. To help prevent this occurring, do not fold or store the product if it is damp or wet. Always store the product in a well ventilated area.

Always check parts regularly for tightness of screws, nuts and other fasteners - tighten if required. To maintain the safety of your nursery product, seek prompt repairs for bent, torn, worn or broken parts. Use only those parts and accessories approved by Britax.

THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE.

10. TO FOLD THE STROLLER

- A. Remove the rain cover (where supplied or fitted), close the canopy and place the backrest in the fully upright position. Apply the brakes and lock the swivel wheels.
- B. Lift the lower hinge lock (at the bottom).
- C. Depress and release the secondary lock. Pull up on loop and push handles forward until the frame is fully folded.
- D. Squeeze frame together and apply the storage latch.



6. USING THE TETHER STRAP

WARNING: Use the tether strap to prevent the stroller from rolling away.

NOTE: A tether strap is fitted to this stroller, place the loop over desired wrist when using the stroller.

- A. Should you need to change wrist, remove the tether strap and apply to the other handle. To ensure a tight fit, loop the tether strap around rather than over the handle. Open the end of the tether strap and insert the opposite end through the opening created. Pull until tether strap tightens around handle.

NOTE: Fit the strap below the frame support bar so that it does not slide off the handle.



7. TO ADJUST THE LEG SUPPORT

 
- A. Lower the leg support by pressing up the release latches located underneath on both sides of the leg support. Then push the leg support down.
- B. Raise the leg support by lifting it until the release latches lock into place.



8. TO ADJUST THE BACKREST

- A. Squeeze both the right hand and left hand latches fully and pull them back towards the rear of the stroller to the desired layback position.
- B. Lift the backrest to select a more upright seating position.

NOTE: DO NOT ADJUST THE BACKREST WHILE YOUR CHILD IS IN THE STROLLER.

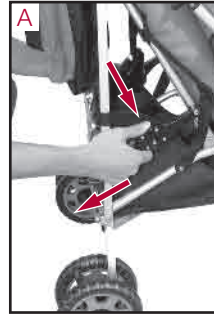

9. TO ATTACH AND USE THE CANOPY

- A. Attach the canopy clips to each side of the stroller frame by pushing the clips over the tubes until they snap into place.
- B. Secure the canopy to the frame by attaching the hook and loop tabs together on the side of the frame and backflap.
- C. Feed elastic ties through slit in fabric on either side and tie down the canopy by looping the elastic strap over the plastic toggle.
- D. Open the canopy by pushing the front of the canopy forward then push the canopy hinges down on each side to lock it in place.
- E. To view the canopy window, pull/roll back the flap and secure with the elastic loop and toggle.

